

What triggers the VP3300 reader change between the 3 different power modes?

Please refer to the diagram below for detailed triggers:

Related articles

[How to check the battery level of the audio or BlueTooth version VP3300 reader?](#)

[What are the battery stats for a VP3300?](#)