



How to clone the configuration setting from a known working MiniMag II or SecureMag reader to a new reader?

Step-by-step guide


1. Launch the [MagSwipe Configuration Software](#) with the known working reader connected to a USB port of the computer directly
2. Click the "Change Advanced Reader Settings" on the left (step #1) and then follow the numbered sequence in the screenshot below to get the working reader's settings read into this software

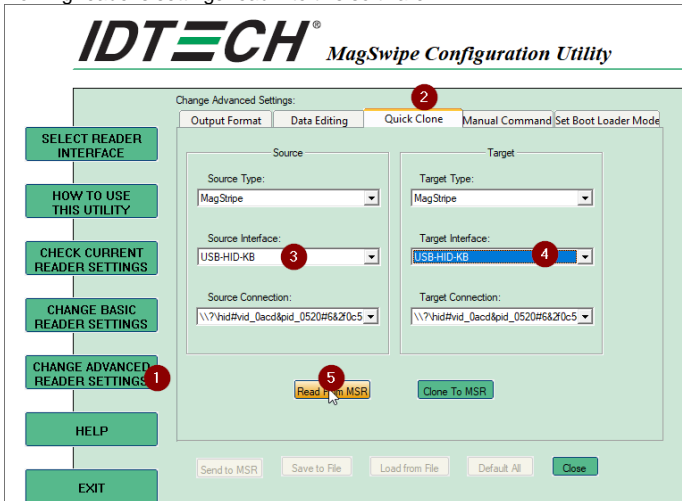

3. You should see this confirmation pops up:

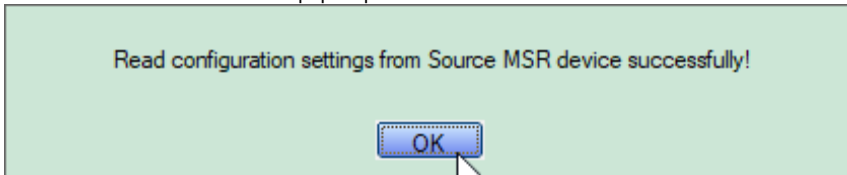


4. Click the OK button. Disconnect the working reader first and then connect the new reader to the USB port
5. Click on the Clone to MSR button (step # 6) shown in the screenshot below:

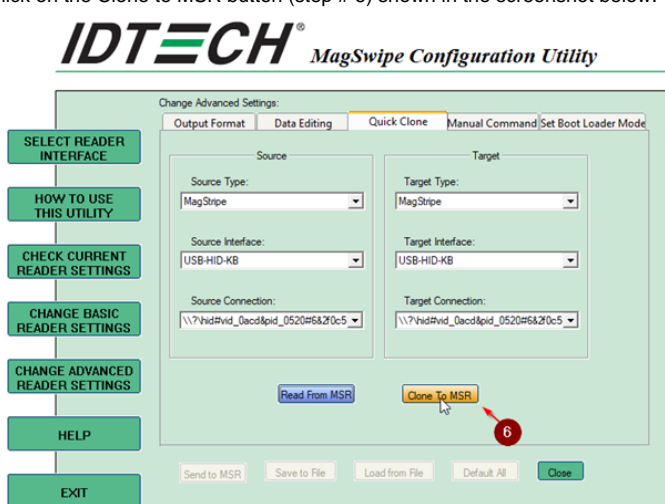


6. You should see this confirmation pops up:

 Clone to Target MSR device successfully!



Test read a card in Notepad to confirm the output looks exactly the same as the working reader's. And then do a transaction in your app to confirm it works.

 This works with all the IDTECH USB/HID, USBKB & RS232 interface card readers that this Configuration software supports. (e.g. SecureMag, Easy Mag, SecureHead, etc.)

Related articles

Content by label

There is no content with the specified labels

